

# Fire Extinguisher Monthly Inspection Guide







# **Fire Extinguisher Monthly Inspection**

- Required by the NFPA 10 (7.2.4.1)
- Monthly spot checks can be done by anyone
- Intended to give reasonable assurance that extinguishers are operable when needed
- This guide will descried how to perform monthly fire extinguisher checks







### **Extinguisher Locations**

- You must know the locations of the units
  - Have a list of fire extinguishers you plan to inspect
  - Make sure extinguisher has a valid maintenance tag









#### Access

- Ensure extinguisher is not blocked
  - Do not obstruct access or visibility
  - If blocked:
    - Relocate small items, report larger obstructions


       Report larger items to have them moved
       immediately











### **Mounting and Labels**


- Fire extinguisher mounted on wall or in cabinet
  - The cabinet door should open and close easily
- Labels and instructions must face outward
- All labels must be legible















# Seal, Pin, and Gauge

- Ensure tamper seal is present and firmly holding the pin
- Gauge needs to indicate full charge (in the green)

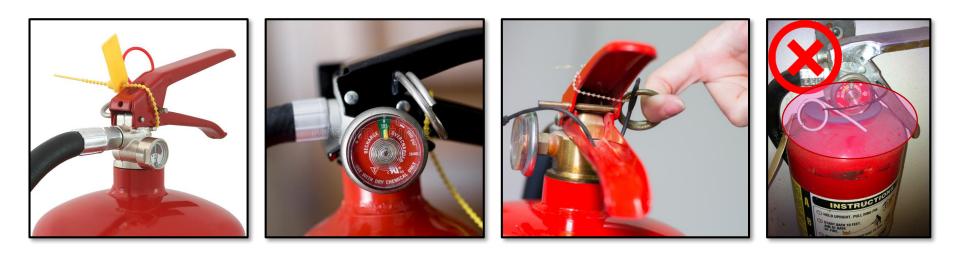



#### **Overall Condition**


- Confirm hose in good condition (look for cracks, discoloration)
- Nozzle should be clear of blockages
  - Signs of yellow powder may indicate leak or tampering
- No obvious physical damage or wear is noticeable.











# Initialing the Tag

- Validate annual maintenance tag (from service provider)
   O Ensure it is within annual service date
- Sign and date tag (on back) with monthly inspection date and your initials








# Summary

Fire Extinguisher Monthly Quick Checklist

 Unit is in the proper location
 Unit is easily visible and accessible
 Operating instructions face outward and are legible
 Safety seals are in place and snug on pin
 Gauge is in the green and unit appears full
 Overall condition of unit looks undamaged
 Initial the tag and report any problems

- Reporting Problems
  - e-mail firesafety@ucf.edu





#### **Contact Information**

**UCF Environmental Health & Safety** Office: 407-823-6300

Fire Extinguisher Inquiries firesafety@ucf.edu

Fire Safety Team:

Liangely Guilbe-Perez Liangely.Guilbe-Perez@ucf.edu 407-823-2314